



TRAXON | e:cue
MEMBER OF PROSPERITY GROUP



AM476230031, AM476240031, AM476250031

SYMPHOLIGHT Gateway BACnet

Information for Use

Read the Information for Use and the Safety Instructions carefully. Subject to modification without prior notice. Typographical and other errors do not justify any claim for damages. Modification of the product is prohibited. This manual is designed for specialists trained in control and automation technology with experience in installing, commissioning and using gateways. All product names and trademarks mentioned in this manual are trademarks of their respective owners. Except for internal use, relinquishment of the instructions to a third party, duplication in any type or form - also extracts - as well as exploitation and / or communication of the contents is not permitted.

Downloads and more information at:
www.ecue.com

Edition:
16.05.23 [EN_SLGW_Setup_v1p3]

Published by:
Traxon Technologies Europe GmbH
Karl-Schurz-Strasse 38
33100 Paderborn, Germany

©2023 Traxon Technologies Europe GmbH
All rights reserved

Traxon Technologies Europe GmbH
Sales Operations
Karl-Schurz-Str. 38
33100 Paderborn, Germany
+49 5251 54648-0
support@ecue.com

Table of Contents

1	Safety instructions	03
1.1	Symbols	03
1.2	General safety instructions	03
2	General device description	03
2.1	Delivery content	04
2.2	Optional accessories	04
2.3	Number of data points	04
2.4	Product specifications	05
2.5	Connectors and interfaces	05
2.6	User interface: LEDs	06
2.7	Reset button / options	06
3	General remarks	07
3.1	Transport	07
3.2	Unpacking	07
3.3	Warranty regulations	07
3.4	Maintenance and Repair	07
3.5	Disposal	07
3.6	Support	07
4	Installation	08
4.1	Installation conditions	08
4.2	Mounting	08
4.3	Ethernet connection	08
4.4	Power supply	09
5	Configuration using the web interface	09
5.1	Opening the web interface	09
5.2	Logging in	10
5.3	Configuring	10
6	Web interface: operation and functions	10
6.1	“General” menu	11
6.2	General information on the driver menu areas	21
6.3	“System” menu	22
6.4	BACnet menu	23
6.5	MQTT menu	33
6.6	Help menu	35
7	Dismounting	38
8	Certifications	38
9	FAQs	38
10	Dimensions	39

1 Safety instructions

Please read the safety instructions, provided in a separate manual, carefully. Make sure that the environmental, mounting, and installation prerequisites are met. This manual should be kept at a safe place and in reach of the device.

1.1 Symbols



The exclamation mark warns about possible damage of the device itself, to connected devices, and to the user.



The information symbol gives general hints and informs about handling and procedures for use of the device.

1.2 General safety instructions

The hardware and software present no direct hazards. However, in their function as a router or gateway between networks in building infrastructures, they are able to seriously disrupt the interaction of network components.



- Misconfiguration of hardware and software:

Faulty configuration of hardware and software can cause malfunctions in the building infrastructure on network components, sensors or actuators, for example:

- Monitoring devices, such as fire alarm or intrusion detection systems, are deactivated.
 - Machines and fans start up unexpectedly.
 - Gate valves and other valves open or close unintentionally.
- Under certain circumstances, this can lead to serious injuries or death.

The device should only be configured by specialist personnel who are familiar with network configuration.

A connection to a network must not be established, before the device has been fully configured.

- The device must be supplied by a power supply that is certified according to the local regulations (e.g. SELV, Class 2).



- If safety instructions are missing, please contact Traxon e:cue to receive a new copy.

2 General device description

The SYMPHOLIGHT Gateway BACnet is an MQTT to BACnet interface. It converts data from the lighting management system SYMPHOLIGHT into the building management system compliant format. Forward e.g. movement and brightness information and to process it smartly in the building management system.

With the integrated web interface, you can configure the SYMPHOLIGHT Gateway using a web browser, save the configuration and call up statistics and documentation. That makes configuring the devices significantly easier, allowing them to be commissioned more quickly. The web interface also enables the use of different upgrade options of the gateway, such as activation on up to 2,500 data points.

Main functions of the SYMPHOLIGHT Gateway BACnet

- Converting SYMPHOLIGHT's MQTT to BACnet
- Forwarding of any data from SYMPHOLIGHT via MQTT, e.g. brightness and color information, sensor, energy and luminaire information (RDM, DALI)
- Available with 25, 500 or 2500 data points (1 data point corresponds to one unidirectional piece of information from SYMPHOLIGHT)
- Automation functions (alarms, trend log recording and scheduling) on a data point basis
- Reporting of system status, sequence information and failures
- Web interface for configuration
- Fast import of large data point configuration via Excel file
- BACnet/SC - Encrypted transmission via BACnet standard 22
- Incl. SYMPHOLIGHT license for transmission of MQTT data

2.1 Delivery content

Delivery content for the e:cue SYMPHOLIGHT Gateway BACnet:

1. e:cue SYMPHOLIGHT Gateway BACnet with:
 - 25 data points (AM476230031)
 - 500 data points (AM476240031)
 - 2,500 data points (AM476250031)
2. Safety instructions
3. Welcome note
4. 2-pin Power terminal plug

2.2 Optional accessories

Power supply 15W 24V DIN rail (AM1884100HA)

2.3 Number of data points

 
A data point corresponds to a unidirectional connection between two data points. The direction of value transmission is irrelevant here.

The number of data points (DP) available is determined by the device type and license. The number of DPs supplied with the gateway is shown on the back of the device. The number of DPs corresponds to the number of different addresses entered in the file **dispatch.txt** with the keyword **target =**.

With regard to data points, gateways of the SYMPHOLIGHT Gateway BACnet are available in three gradations:

- 25 data points (AM476230031)
- 500 data points (AM476240031)
- 2,500 data points (AM476250031)

You can upgrade your data points at any time. Please contact support@ecue.com.




2.4 Product specifications

Dimensions	31 x 100 x 65 mm / 1.22 x 3.94 x 2.56 in (excl. fastening clip)
Weight	250 g / 0.55 lb
Power supply input	12 ... 24 V DC or AC
Power consumption	1.7 W
Operating temperature	0 ... 40 °C / 32 ... 104 °F
Storage temperature	0 ... 40 °C / 32 ... 104 °F
Operating / storage humidity	20 ... 80% RH, non-condensing
Protection class	IP20
Housing	metal
Mounting	on 35 mm DIN rail (EN 60715)
Certificates	CE, UKCA


Interface specifications

Power interface	Power supply on 2-pin terminal plug V + : 12 ... 24 V DC or AC V - : GND or 12 ... 24 V AC wire gauge: 0.2 - 1.3 mm²
Ethernet-Port	1 x Ethernet 10/100 Mbit/s, RJ45
User interfaces	LEDs for Ethernet activity and device status; Reset button; web interface for configuration

2.5 Connectors and interfaces

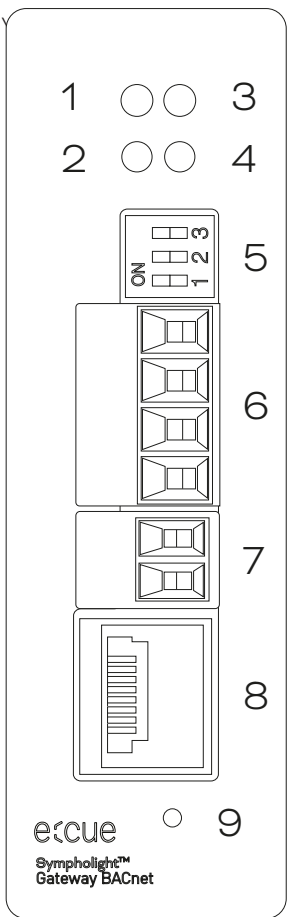

View from side:

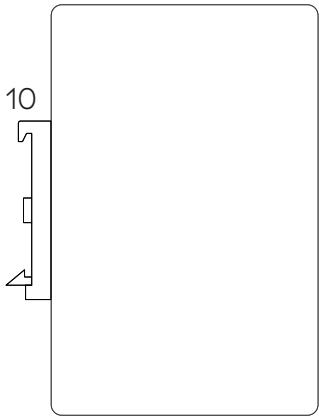

1	LED Power	"2.6 User interface: LEDs" (page 06)
2	LED Status	
3	LED	
4	LED	no function
5	DIP switches	
6	RS-485 interface (Shield, SGND, A-, B+ top to bottom)	only for: "B) Gateway mode: Data links = BACnet MS/TP" (page 27)
7	Power supply (V - or GND, V + top to bottom)	"4.4 Power supply" (page 09)
8	Ethernet port	"4.3 Ethernet connection" (page 08)
9	Reset button	"2.7 Reset button / options" (page 06)
10	DIN rail bracket	

On the casing, there is a product label with the following data:

- Ethernet MAC address(s)
- Default IP address

2.6 User interface: LEDs

The SYMPHOLIGHT Gateway BACnet has four LEDs on the front panel. The LEDs show the basic states of the device.

LEDs

1	Power	Off: no voltage applied. On: voltage applied.
2	Status	Orange for approx. 8 sec: System initialization after switch-on Flashing green: Normal state, all drivers communicating Flashing red and green: A communication partner isn't communicating. Red flashing: More than one communication partner isn't communicating. Flashing alternately red and green: During the reset process " 2.7 Reset button / options " (page 06).
3	Tx	no function
4	Rx	no function

Status LED:

Color code	Definition	Data point
Flashing green	Normal state	
Flashing orange and green	Projected indicator	S LED info
Flashing red and green	A failure parameter on defect	S LED warning
Red flashing	Two or more failure parameters on defect	S LED error
Red	At least one driver not started properly	

The data points determine the LED color code with ascending priority. The **S led warning** and **S led error** parameters are set automatically by the gateway in accordance with the projected failure parameters.

2.7 Reset button / options

With the hardware Reset button, the device can be reset without calling up the configuration interface. You can find the reset button on the front of the device. The button may only be pressed with a suitable tool (Ø1.5mm).

Depending on the duration of pressing, the following changes are executed:

Duration in seconds	Action	Comments
1 ... 5	Restart	Status-LED flashes green.
5 ... 10	Sets the IP address to 192.168.123.1 (default) until the next restart.	Status-LED flashes orange.
30+	Factory reset	Status-LED flashes red.

3 General remarks

3.1 Transport

Only transport the device in its original packaging. This protects the device from damage.

3.2 Unpacking

Only unpack the e:cue SYMPHOLIGHT Gateway BACnet at its installation location. To protect the device against condensation water, unpack it and wait until all moisture remaining in the device has evaporated. Condensation can occur when the device is moved from a cold to a warm location. Keep the packaging for use in case of further transport. Inspect all parts for completeness regarding chapter „2.1 Delivery content“ on page 04. If there is apparent damage to the device or parts are missing from the delivery scope, please contact the Traxon e:cue Support service.

3.3 Warranty regulations

Depending on the product, warranty regulations are of different duration. The warranty time is usually noted in the quote and in the order confirmation. See www.traxon-ecue.com/terms-and-conditions for details. Legal warranty regulations apply in any case.

3.4 Maintenance and Repair

This device requires no maintenance.



- Before dismounting, appropriate measures must be taken to protect the respective components against damage caused by electrostatic discharge (ESD protection).
- Do not try to repair the device. Return it to your Traxon e:cue distributor for replacement or repair.

3.5 Disposal



 
Batteries and technical appliances must not be disposed of with domestic waste, but should be handed in at the appropriate collection and disposal points.

The proper disposal of packing materials and of the device is the responsibility of the respective user and for his account; in all other matters, the retrieval obligation for packing materials and the device is subject to the statutory regulations.

3.6 Support

In case of technical problems or questions regarding installation and repair please contact:

Traxon Technologies Europe GmbH
 Customer Service
 Karl-Schurz-Str. 38
 33100 Paderborn, Germany
 +49 (5251) 54648-0
support@ecue.com



4 Installation

The installation of the SYMPHOLIGHT Gateway BACnet consists of mounting the device, connections to the network via Ethernet and to power supply.

The sequence of cabling is not defined. Supply the SYMPHOLIGHT Gateway BACnet with power after all cabling is completed; it starts booting.



Electric shock injury hazard:

The device may only be installed in a control cabinet (top-hat rail) when the power is disconnected.

The system must be disconnected for installation.

4.1 Installation conditions

Installation position	No terminals on top and bottom
Horizontal spacing	No spacing necessary. A sufficient distance (≥ 15 mm) to the other components on the top hat rail is recommended for mounting the device in the control cabinet. This ensures better heat dissipation, which can have a positive influence on the service life of the device.
Vertical spacing	No spacing necessary
Installation location	Indoor

4.2 Mounting

The e:cue SYMPHOLIGHT Gateway BACnet is designed to mount onto a 35 mm DIN rail (EN 60715) in a vertical position. Install the gateway in the electrical cabinet and make sure that there is sufficient ventilation to ensure the specified temperature range (0 to 45 °C).

 
4.3 Ethernet connection



- Do not connect to a customer network before the gateway has been fully configured.
- Never connect more than one SYMPHOLIGHT Gateway BACnet in factory state to a network. The identical IP addresses will conflict and disturb proper communication.
- The Ethernet port of the SYMPHOLIGHT Gateway BACnet is not designed for inter-building connections with power and lighting transients. Use only intra-building networks to connect the SYMPL Nodes and Cores.

Connect the SYMPHOLIGHT Gateway BACnet at the designated Ethernet interface with a patch cable (RJ45, CAT5). Use CAT5 UTP or STP cable (or equivalent). The pin-assignment of the Ethernet port corresponds to RJ45 standards. You can use every common Ethernet component, like cable, splitters, and switches.

Avoid laying cables parallel to power lines, e.g. to motors, frequency converters, etc.



4.4 Power supply

Connect the gateway to the green, two-pole port with a power supply as per the technical specifications.



- Risk of injury due to electrical current on 230 V mains:
Do not use a defective power supply unit or connection lines.
Do not switch the power supply on until the gateway has been installed and connected.
- The guarantee will become null and void if the gateway is connected to an unsuitable power supply or the casing is opened. There are no controls inside the casing.

5 Configuration using the web interface

To configure the gateway, the installation of Ethernet and power supply must be completed. You also need:

- Computer, connected to the network
- Installed web browser

5.1 Opening the web interface

The gateway has an integrated web server for configuration. The web server provides the configuration settings in the form of websites. You use the web interface to configure the IP and other settings, and you save the changes with **[Save]**. Following changes to the network configuration, it is sometimes necessary to restart the gateway.

Under factory settings, the web server is accessible at the following IP address:

- IP address: 192.168.123.1
- Network mask: 255.255.0.0

Connect the SYMPHOLIGHT Gateway BACnet to your PC with the network cable for configuration.

Enter the IP address of the SYMPHOLIGHT Gateway BACnet web server in a web browser:

http://192.168.123.1.



Note that your computer's LAN connection has to be set appropriately. For a manual setting, define the IP address as 192.168.123.2, for example. The network mask must match that of the gateway.

Web browser support

The integrated web server has been tested with various browsers and operating systems and has been approved. If you have problems with your browser, please notify the support team. Please indicate the exact browser version, the exact version of the operating system and a brief description of the problem for the diagnosis.

Web server language

The gateway provides the website in both German and English.

Switch the language in the web interface using the respective flag symbols in the top right.




5.2 Logging in

Enter the following user name and password (preconfigured administrator access) to sign in to the web server:

- Username: **admin**
- Password: **ecue**

The password can be changed using the configuration pages (menu **General | Password**).

Click **[Log In]**.

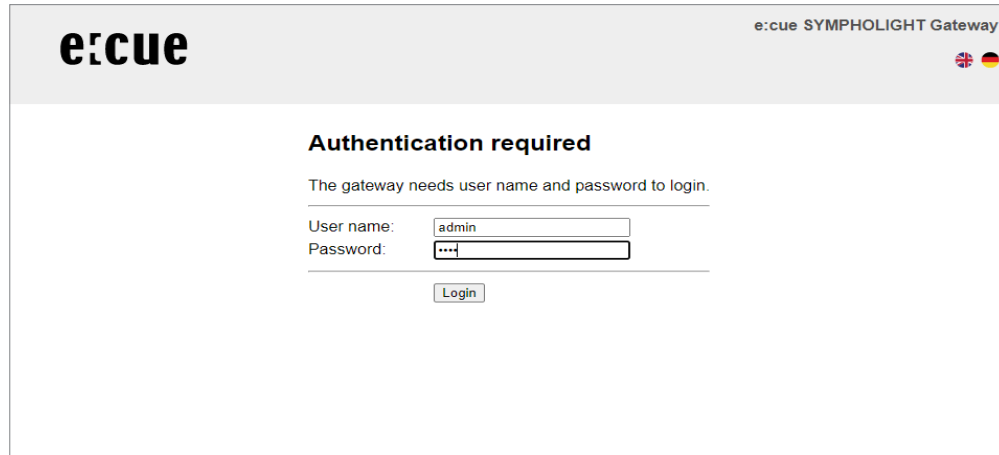

5.3 Configuring

 
In the web interface, configure the settings and data points to your requirements. Consider the menu items “General”, “System”, “BACnet” and “MQTT”.

For optional data point setup support via remote maintenance or on site, contact support@ecue.com.

6 Web interface: operation and functions

When you have successfully logged in, you will see the gateway configuration interface with an overview page. The upper menu bar is there for you to navigate this.

Upper menu area



The web interface contains the following menu areas for configuration of the gateway:

- General
- System
- BACnet
- MQTT
- Help

All gateway settings and functions can be found in the **General** menu area. Documents and diagnostic functions can be accessed via the **Help** menu.

The username of the current user is shown in the top right. The meanings of the symbols are as follows:



Click to log out.



Click to change the language.


Bottom left-hand menu area


Each menu area includes sub-menus in the left-hand column which you use to call up the individual configuration pages / views.

6.1 “General” menu

6.1.1 General | Overview


After logging in, the SYMPHOLIGHT Gateway BACnet loads an overview page for the device.

 You can reload and update the page with the **Refresh** button.

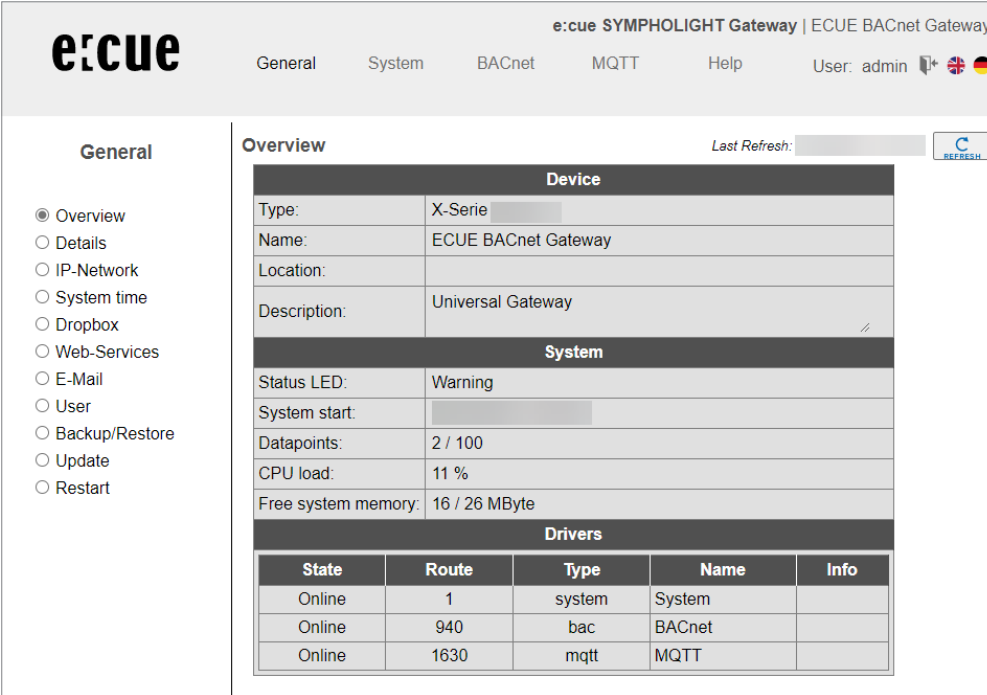

General

- Overview
- Details
- IP-Network
- System time
- Dropbox
- Web-Services
- E-Mail
- User
- Backup/Restore
- Update
- Restart

Overview Last Refresh: 

Device

Type:	X-Serie
Name:	ECUE BACnet Gateway
Location:	
Description:	Universal Gateway

System

Status LED:	Warning
System start:	
Datapoints:	2 / 100
CPU load:	11 %
Free system memory:	16 / 26 MByte

Drivers

State	Route	Type	Name	Info
Online	1	system	System	
Online	940	bac	BACnet	
Online	1630	mqtt	MQTT	

Type: SYMPHOLIGHT Gateway BACnet type display

Name, installation location, description: This project-specific information serves to identify the SYMPHOLIGHT Gateway BACnet. The name also appears in the upper-right corner of the menu and is displayed for you to check when backing up data.

Status LED: This describes the current state of the status LED on the front of the SYMPHOLIGHT Gateway BACnet.

System start: The time at which the SYMPHOLIGHT Gateway BACnet system was last started.

Data points: Displays the number of used data points and licensed data points.

CPU-Load: Displays CPU usage in %. Avoid prolonged CPU usage of over 50%.


RAM: Displays the size of the used and total RAM in MB. Too little free space can lead to operational problems.

Drivers: Lists the current statuses of the drivers. If a driver is not online, this suggests a booting problem or a problem with the configuration of a driver. Use the diagnostics tool in the Help menu to find out more information to solve the problem.

6.1.2 General | Details

In the SYMPHOLIGHT Gateway BACnet, you can store information on the device name, the installation location, a description of the SYMPHOLIGHT Gateway BACnet and contact partner details. This information is used to better identify the relevant SYMPHOLIGHT Gateway BACnet in the network when using several SYMPHOLIGHT Gateway BACnets.

Edit the input fields for this purpose.





General

System

BACnet

MQTT

Help

User: admin  

General

Overview

Details

IP-Network

System time

Dropbox

Web-Services

E-Mail

User


Backup/Restore


Update

Restart

Details

Last Refresh:

 REFRESH

Parameter	Value
Name:	ECUE BACnet Gateway
Location:	
Description:	Universal Gateway
Contact person:	
<div> Save</div>	

i

To save the settings on the configuration pages, click on **[Save]**.

An info dialogue then confirms the application of the entries.

6.1.3 General | IP network

Configure the IP network settings on this configuration page.

ecue
e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

General
System
BACnet
MQTT
Help
User: admin

General

- ☐ Overview
- ☐ Details
- ☒ IP-Network
- ☐ System time
- ☐ Dropbox
- ☐ Web-Services
- ☐ E-Mail
- ☐ User
- ☐ Backup/Restore
- ☐ Update
- ☐ Restart

IP-Network
Last Refresh:
 REFRESH

Network adapter LAN1					
MAC address:	<div style="background-color: #ddd; height: 15px;"></div>				
DHCP:	Off <input type="checkbox"/> On <input checked="" type="checkbox"/>				
IP address:	<div style="background-color: #ddd; height: 15px;"></div>				
Netmask:	<div style="background-color: #ddd; height: 15px;"></div>				
Default gateway					
Gateway:	NONE ✖ Delete				
Advanced IP-Routing					
Nr.	IP	Netmask	Gateway	Adapter	Edit
					+ Add
Network name info					
Hostname:	<div style="background-color: #ddd; height: 15px;"></div>				
Nameserver via DHCP:	Off <input type="checkbox"/> On <input checked="" type="checkbox"/>				
Nameserver 1:	<div style="background-color: #ddd; height: 15px;"></div>				
Nameserver 2:	<div style="background-color: #ddd; height: 15px;"></div>				
Services					
Websserver access:	<div style="background-color: #ddd; height: 15px;"></div>				
HTTPS Certificate:	Choose File No file chosen ✖ Upload				
SSH:	Off <input type="checkbox"/> On <input checked="" type="checkbox"/>				
Syslog					
Local Loglevel:	<div style="background-color: #ddd; height: 15px;"></div>				
Remote:	Off <input type="checkbox"/> On <input checked="" type="checkbox"/>				
Remote Server:	<div style="background-color: #ddd; height: 15px;"></div>				
Remote Server Port:	<div style="background-color: #ddd; height: 15px;"></div>				
					Save

Network adapter LAN1:

For the Ethernet interface, configure the **IP address**, **network mask** and **default gateway** (if required). The network adapter's **MAC address** is displayed.

Network name:

The **host name** as well as two **name servers** can be stated here for name resolution.

Services:

Use the drop-down list **Web server access** to select which protocols to use to access the gateway in the network:

- Active port 80 with unencrypted http protocol
- Active port 443 with encrypted https protocol
- Active ports 80 and 443.

Webserver access:	https (80 redirected to 443) ▼
	https (443)
	https (80 redirected to 443)
	http and https (80/443)

Click **[Save]** to apply the changed IP network settings.

The new IP settings are also activated upon saving. It may be necessary to log in again after the IP address has been changed. If IP network services with an IP name resolution are required, it is necessary to enter at least one IP name server. The secured https protocol can also be used to access the web server. Enter https:// before the IP address in the web browser here.



If communication protocols that operate via the network are installed on the gateway, carry out a system restart. This is necessary because the drivers only assume the settings of such protocols when starting the system.
For the exact IP settings, ask your network administrator. If the IP network is not required for gateway operation, leave the standard settings. This makes it easier to access the gateway later.

6.1.4 General | System time

The SYMPHOLIGHT Gateway BACnet has an integrated, battery-powered, real-time clock for time keeping within the system. Several protocols require the current time. The system time must therefore be synchronized. Automatic time synchronization is advisable. However, this is not possible for every system.

The network time protocol (NTP) is a standard for synchronizing clocks in Internet protocol communication networks. The time can be set manually and also via an NTP sever or BACnet time synchronization.

The time zone can be set in order to localize the system. Adjustments are made automatically for daylight saving time based on this time zone.

Configure the time zone for the SYMPHOLIGHT Gateway BACnet and the format for the time and date. A complete system restart is required to apply the settings.



Manual time setting:

This is where you make the manual time setting using the input fields.

With the [Refresh] button, you copy the current PC time to the input fields for the time setting.

[Set Time] saves the set time in the gateway.

NTP time synchronization

When using NTP time synchronization, the SYMPHOLIGHT Gateway BACnet takes its time from the specified NTP server.

Evaluating BACnet time synchronization:

The SYMPHOLIGHT Gateway BACnet listens for and evaluates sent BACnet messages for time synchronization.



- Time synchronization via BACnet can only be used if the BACnet driver is installed and if there is a time synchronization master in the BACnet network. Please clarify this with the BACnet network coordinator.
- For time synchronization via NTP, it must be possible to access an NTP server from the IP network. Ask the system administrator about this.

6.1.5 General | Dropbox

The Dropbox function can be enabled as an option. Contact us or click [\[Request\]](#) to order this option by mail.

The screenshot shows the web interface of the e:cue SYMPHOLIGHT Gateway. The top navigation bar includes the logo, tabs for General, System, BACnet, MQTT, and Help, and a user status bar showing 'User: admin' with flags for German and English. The left sidebar under 'General' lists various settings: Overview, Details, IP-Network, System time, Dropbox (selected), Web-Services, E-Mail, User, Backup/Restore, Update, and Restart. The main content area is titled 'Dropbox' and contains a sub-tabbed interface with 'License', 'Account', 'Path', 'Datapoints', and 'Backup/Restore'. The 'License' tab is active, displaying a message: 'There is no license to connect the Universal Gateway to dropbox accounts. You can start a license request here. Therefore we need some information about this Universal Gateway. This information will be located automatically.' Below this message is a green 'Request' button. A 'Last Refresh' field and a 'REFRESH' button are located at the top right of the main content area.

6.1.6 General | Web services

The gateway offers web services to read data point lists or change data points. To activate web services, tick the Web services box.

You can edit the configuration file for the data point lists (systems) directly.

The screenshot shows the web interface of the e:cue SYMPHOLIGHT Gateway. The top navigation bar is identical to the previous screenshot. The left sidebar under 'General' lists the same settings, but 'Web-Services' is now selected. The main content area is titled 'Web-Services' and contains a sub-tabbed interface. The 'Web-Services enabled' checkbox is checked. Below this, there is a section titled 'Content of configuration file' which contains a large text area for editing the configuration. At the bottom right of this section is a green 'Save' button. A 'Last Refresh' field and a 'REFRESH' button are located at the top right of the main content area.

6.1.7 General | Email

Activate and configure the email service on this configuration page.

e:cue SYMPHOLIGHT Gateway | ECU E-BACnet Gateway

General System BACnet MQTT Help
User: admin

Last Refresh:

General

- ☐ Overview
- ☐ Details
- ☐ IP-Network
- ☐ System time
- ☐ Dropbox
- ☐ Web-Services
- ☒ E-Mail
- ☐ User
- ☐ Backup/Restore
- ☐ Update
- ☐ Restart

E-Mail

☐ E-Mail service enabled

SMTP-Server

IP address:	<div style="border: 1px solid #ccc; width: 100%; height: 20px;"></div>
IP port:	<div style="border: 1px solid #ccc; width: 100%; text-align: center;">431</div>
Connection type:	<div style="border: 1px solid #ccc; width: 100%; padding: 2px;">Unsecured ▼</div>
Authentication:	<div style="border: 1px solid #ccc; width: 100%; padding: 2px;">None ▼</div>
Username:	<div style="border: 1px solid #ccc; width: 100%; height: 20px;"></div>
Password:	<div style="border: 1px solid #ccc; width: 100%; height: 20px;"></div>

Send mail

Save

6.1.8 General | User

The password for the user `admin` can be changed on this configuration page. For security reasons, you are required to enter the current password once and then the new password twice.

Click **[Save]** to confirm.

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

General
System
BACnet
MQTT
Help
User: admin

General

Overview
Details
IP-Network
System time
Dropbox
Web-Services
E-Mail
User
Backup/Restore
Update
Restart

Options

Password options
high complexity with dictionary
Save

Accounts

	User	Description	Account type	Edit	Info
1	gw	default user	Admin		(default-password)
2	admin	default user	Admin		(default-password)
					Add

Last Refresh:
REFRESH

6.1.9 General | Backup/Restore

You can back up and restore the entire gateway configuration. The backup consists of a tgz archive file.

The screenshot shows the 'e:cue SYMPHOLIGHT Gateway' web interface. The top navigation bar includes 'General', 'System', 'BACnet', 'MQTT', 'Help', and 'User: admin'. The left sidebar lists various settings: Overview, Details, IP-Network, System time, Dropbox, Web-Services, E-Mail, User, Backup/Restore (selected), Update, and Restart. The main content area is titled 'Backup / Restore' and contains a 'Mode' section with two radio buttons: 'Backup gateway configuration' (selected) and 'Restore gateway configuration'. Below these is a 'Choose File' button and a 'No file chosen' message. There are also 'Options' for 'Encryption / Decryption' (a toggle switch set to 'Off') and a 'Password' field. A 'Start' button is at the bottom right of the form.

Create gateway data backup:

Use this option to generate a data back-up of the gateway configuration. Click **[Start]** and save the back-up file. The data back-up includes all the gateway's settings and is stored locally on your PC.

Restore gateway data backup:

When you select the **Restore gateway data back-up** option, the gateway reads an available data backup from your local data storage device and restores the configuration.

Use **[Choose File]** to load the backup file to the input field and then click **[Start]**. A dialogue box will show the archive contents.

The dialog box is titled 'Backup/Restore' and contains a table with the following information:

Backup information	
Created at:	
Name:	SYMPHOLIGHT Gateway
Location:	
IP address:	192.168.123.
Filename:	/ugw/uploads/restore.tgz

Below the table, there is a warning message: **ATTENTION: If you restore the backup archive, the current configuration will be lost.** This is followed by a confirmation question: **Do you really want to restore the archive?** At the bottom, there are 'Ok' and 'Cancel' buttons.

Confirm the information dialogue with **[OK]**. After restoring the data back-up, the gateway has to be restarted to make the new configuration take effect.



It is only possible to restore data backups that are intended for the gateway. It may only be possible to restore parts of faulty data backups.

6.1.10 General | Update

The SYMPHOLIGHT Gateway BACnet offers the following options for license and software updates:

- Request new license
- Upgrade license
- Update SYMPHOLIGHT Gateway BACnet system software
- Configure driver

License request

The current license is displayed.



To request a license (= more data points), contact support@ecue.com. Do not use the web interface.

The screenshot shows the e:cue SYMPHOLIGHT Gateway web interface. The top navigation bar includes 'General', 'System', 'BACnet', 'MQTT', 'Help', and 'User: admin'. The left sidebar lists various settings under 'General', with 'Update' selected. The main content area is titled 'Update' and contains four tabs: 'License request' (selected), 'License upgrade', 'Software update', and 'Driver configuration'. The 'License request' tab displays the following information:

- This Universal Gateway type is **X-Serie with a maximum of 100 datapoints.**
- The Dropbox exchange is disabled.**
- The gateway's data point license can be upgraded.
- "Request" collects the necessary information.

At the bottom of the tab is a green 'Request' button.

License upgrade

You can load the new license with this tab.

The screenshot shows the e:cue SYMPHOLIGHT Gateway web interface with the 'License upgrade' tab selected. The main content area displays the following information:

- The data point upgrade file is provided as license file.
- This license is only valid for this specific hardware.
- Please select the license file from the file system of your PC and press the start button.
- The license file will be transferred to the gateway, checked and then activated.

Below the text is a 'Choose File' button, followed by the text 'No file chosen' and a red 'X' icon. At the bottom right of the tab is a blue 'Start' button.

You will receive a license file from the manufacturer of the SYMPHOLIGHT Gateway BACnet. This license file must be located on your computer. The license file is only valid for the device the request was sent from. The license file cannot be transferred to other devices.

Load the license file in the input field with **[Choose File]**. Click **[Start]**. The license file is transmitted to the SYMPHOLIGHT Gateway BACnet and checked. The license has now been updated.

Software update

Software additions and fixes mean that it is sometimes necessary to update the SYMPHOLIGHT Gateway BACnet. You will receive an update file from the manufacturer. This must be stored on your computer and must be selected to update. Please only select files that you have received from the manufacturer for the update.

You can install the new firmware version on the gateway on this configuration page.

These updates may contain bug fixes, improvements or new functions.

The screenshot shows the 'e:cue SYMPHOLIGHT Gateway' web interface. The top navigation bar includes 'General', 'System', 'BACnet', 'MQTT', 'Help', and 'User: admin'. The left sidebar lists various configuration options, with 'Update' selected. The main content area is titled 'Update' and contains a 'Last Refresh' button. Below this, there are four tabs: 'License request', 'License upgrade', 'Software update' (which is active), and 'Driver configuration'. The 'Software update' tab displays instructions: 'Please upload software updates here. Only original files provided by MBS ensure proper operation. The file extension has to be ".upd". The uploaded update file is activated after restarting the gateway. The gateway's configuration is not affected.' It also shows the 'Current version: UGW-2372-Osram-alphaKP-StrMapping'. There is a 'Choose File' button, a 'No file chosen' status, and a 'Start' button.

Load the firmware file in the input field with **[Choose File]**.

Transfer the file to the device with **[Start]**.

Driver configuration


Using this tab, you can configure the active drivers and specify the interfaces on which they run.

The screenshot shows the 'e:cue SYMPHOLIGHT Gateway' web interface. The top navigation bar includes 'General', 'System', 'BACnet', 'MQTT', 'Help', and 'User: admin'. The left sidebar lists various configuration options, with 'Update' selected. The main content area is titled 'Update' and contains a 'Last Refresh' button. Below this, there are four tabs: 'License request', 'License upgrade', 'Software update', and 'Driver configuration' (which is active). The 'Driver configuration' tab displays a table with columns: 'Route', 'Name', 'Type', 'Options', 'Serial', and 'Datapoint file'. The table contains three rows: 170 (Log. Verknuepfungen, gw), 940 (BACnet, bac), and 1630 (MQTT, mqtt). The '940' and '1630' rows are checked. Below the table, there is a checkbox for 'Delete complete datapoint configuration'. At the bottom, there are 'Add' and 'Save' buttons.

Route	Name	Type	Options	Serial	Datapoint file
<input type="checkbox"/> 170	Log. Verknuepfungen	gw			/ugw/config/gw1.txt
<input checked="" type="checkbox"/> 940	BACnet	bac			/ugw/config/bac1.txt
<input checked="" type="checkbox"/> 1630	MQTT	mqtt			/ugw/config/mqtt1.txt


6.1.11 General | Restart

Changing the configuration, importing a data backup or adjusting any other settings requires you to restart the communication software of the gateway.

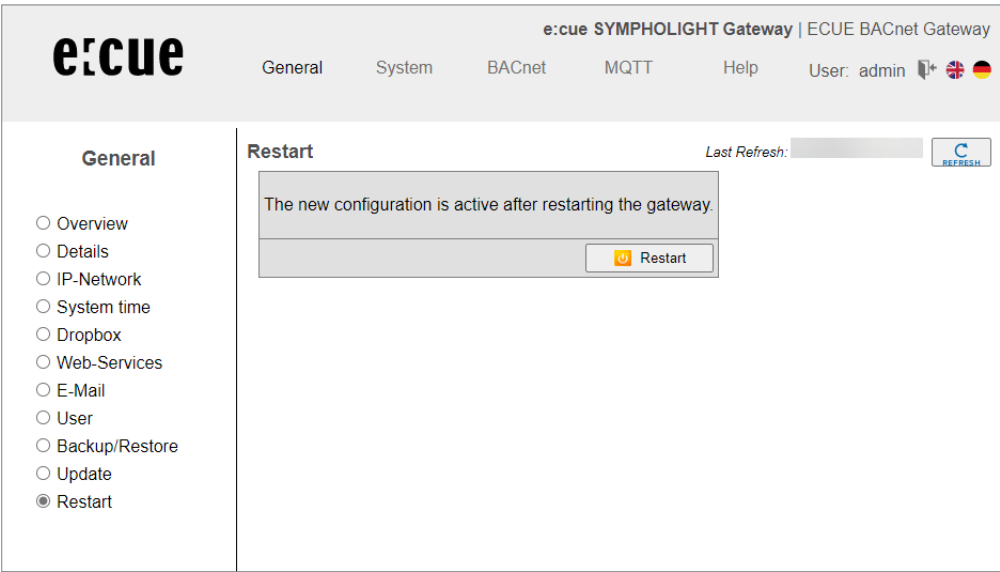


If the system needs to be restarted, this will pop up below the upper menu bar as a **[Restart Required!]** button. Alternatively, you can also carry out a restart using the menu item **General | Restart**.

Click **[Restart]**.

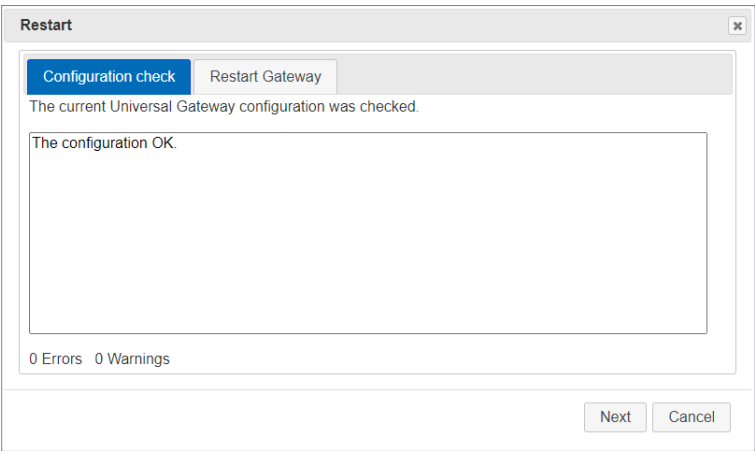

Before restarting, the gateway will check the configuration and display the results of this check. If the configuration is faulty, detailed messages will be shown.

Click **[Next]** or the **Restart Gateway** tab.

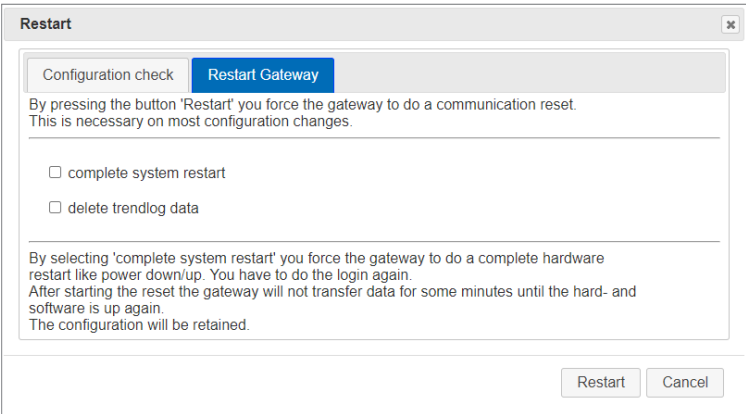

You can select two options (check boxes) for restarting:

- Complete system restart (takes approx. 1 minute):
Automatically selected when changing certain system settings.
- Delete trendlog data
Deletes all data collected up to this point, e.g. **BACnet Trendlog data**. This is necessary to conduct a smooth restart without collected test data during commissioning.


If neither of the two options is selected, a simple restart of the communication software is carried out (duration: approx. 10 seconds).

If a restart is carried out due to a software update, it can take up to 4 minutes.



Once the gateway is fully configured, we recommend carrying out a complete system restart, deleting all historical data. You should then check if everything was booted properly. This ensures that the gateway would restart properly even in the event of a power failure.

Click **[Restart]** again and confirm the information dialogue.

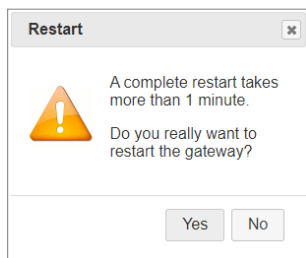

6.2 General information on the driver menu areas

Every installed communication driver is listed as a separate menu item in the upper menu bar. The first sub-menu item on the left, **Status**, lists the current status of a driver's data points. Some selected drivers also have their own sub-menu, which you can use to adjust particular settings for that communication driver.



You can page through the data point list with the arrow key.

The **Page size** drop-down list allows you to define the maximum number of data points that can be displayed at the same time (10, 50, 100, 250 or 500).

The **Update** drop-down list enables you to determine the time intervals at which the data point list is updated automatically (---, 5, 10, 15, 30 or 60 sec).

Each data point has a unique address and name, as well as other properties such as current timestamp, flags, type and value.

The meanings of the data point flags are as follows:

- Valid value V
- Sensor fault F
- Incorrect data point E
- Local operator value L
- Set value / actual value automatic mode -
- Locked, cannot be changed at the moment O
- Upper limit warning W
- Upper limit alarm A

- Upper range of values S
- Lower limit warning w
- Lower limit alarm a
- Lower range of values s
- Historical value H
- Value has changed c
- New data point definition N
- Deleted data point definition D
- Changed data point definition C

Time stamps, types and values are self-explanatory.

Data points that can be changed have two values. The first value is the actual (current) value. The second value is the set (nominal) value, i.e. the last value assigned by the SYMPHOLIGHT Gateway BACnet driver.



The **[Info]** button shows the properties of the selected data point.



The **[Edit]** button shows the current set value. You can also input a new set value which will be sent to the driver as a command.

6.3 “System” menu

This communication driver is found on every gateway. This driver's data points provide information on the gateway's internal system status. Like all other data points, these data points can be edited via data point mappings and mapped onto BACnet for example.

6.3.1 System | Status

The current statuses of gateway data points are displayed and can be edited here if necessary.

General
System
BACnet
MQTT
Help

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

User: admin

System

Status
Settings

1 - System Status

Last Refresh:

Page size: 50
Update interval: --- seconds

Address	Name	Timestamp	Flags	Type	Value	
_error	Driver error		C.....V	I32	0	
_status	Driver state		C.....V	I32	4	
info	'info' level errors.	---	I32	0	
warning	'warning' level errors.		C.....V	I32	1	
error	'normal' level errors.		C.....V	I32	0	
fatal	'fatal' level errors.		C.....V	I32	0	
button	Digital input on the front panel of gateway.		C.....V	I32	0	
relay	Digital output on the front panel of gateway.	---	C.....VI32	I32	0	
led	Application LED on the front panel of gateway.	---	C.....VI32	I32	0	
temp	Temperature inside gateway.		C.....V	DBL	41.521739	
freemem	Amount of free system memory in KB.		C.....V	I32	17976	
cpuload	Load of CPU in percents.		C.....V	I32	13	
watchdog	Watchdog datapoint	---	I32	0	
runtime	Driver runtime in seconds		C.....V	I32	1560	

Clicking the [\[Info\]](#) button will show the detailed properties of a data point.

Datapoint information

Last Refresh:

Datapoint		
Address	1 system relay	
Name	Digital output on the front panel of gateway.	
	Actual Value	Nominal Value
Time		---
Flags	c.....V
Value	0	0

Close

To edit the set value of a data point, click the [\[Edit\]](#) button.

Enter the new set value in the [New Value](#) dialogue and confirm with [\[OK\]](#).

Nominal value

Digital output on the front panel of gateway.

Address:

relay

Timestamp:

Current value:

0

New value:

0

Ok

Cancel

6.3.2 System | Settings

You can make further driver settings on this configuration page.

ecue

GeneralSystemBACnetMQTTHelpUser: admin

System

1 – System driver settings

Last Refresh:

REFRESH

Parameter	Value	Description
IgnoreFailure:	<input type="checkbox"/>	Ignore the 'failure' datapoints for LED state
CheckMemoryLimit:	<input type="checkbox"/>	Enables free memory checking
WatchdogTimer:	<input type="checkbox"/>	Enables Watchdog-Timer datapoint
RuntimeInterval:	<input checked="" type="checkbox"/>	Enables Driver-Runtime datapoint
Interval:	60 s	Update interval for Driver-Runtime datapoint

Save

IgnoreFailure:

So-called **failure** data points exist for communication devices. These show whether communication with a device is working (value **0**) or if communication with a device is faulty (value **1**). The values of these data points are also represented in the gateway's status LED display. Activate the check box to deactivate this setting.

Confirm with [\[Save\]](#). Then close the information dialogue and carry out a simple restart of the communication software to activate the function.

6.4 BACnet menu

BACnet is a widespread network protocol for building automation and stands for "Building Automation and Control network".

6.4.1 BACnet | Status

This page displays the current statuses of all BACnet data points. These data points can be used for data point mapping. The [\[Info\]](#) button loads details on the data points. If necessary, you can change BACnet values using the [\[Edit\]](#) button.

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

General System **BACnet** MQTT Help User: admin

BACnet

940 – BACnet Status Last Refresh: [Refresh]

Page size: 50 Update interval: --- seconds

Address	Name	Timestamp	Flags	Type	Value	
_error	Driver error		c.....V	I32	0	[Info]
_status	Driver state		c.....V	I32	4	[Info]
failure	Failure BACnet		c.....V	I32	0	[Info]
local AI-1100	DALILightSensorLV	---	DBL DBL	0.000000 0.000000	[Info] [Edit]
local BI-1110	DALIPresenceIsPresent	---	I32 I32	0 0	[Info] [Edit]

☒ Status
☐ Settings
☐ Device object
☐ Objects
☐ Files
☐ Persistent data
☐ EDE file

6.4.2 BACnet | Settings

You can make general settings for the BACnet driver and for the BACnet data links on this configuration page. Confirm changes with [\[Save\]](#). Then close the information dialogue and carry out a simple restart of the communication software.

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

General System **BACnet** MQTT Help User: admin

BACnet

940 – BACnet driver settings Last Refresh: [Refresh]

Startup delay: 60 seconds

Password DCC/RD: ugw

Default priority: 12

Disable Default-NC-Object: ☐

Datalinks: BACnet IP

BACnet PTP: ☐

BACnet IP

Parameter	Value
Network number:	1
LAN name:	LAN1
UDP-Port:	47808
IP-Mode:	Normal

[Save]

☐ Status
☒ Settings
☐ Device object
☐ Objects
☐ Files
☐ Persistent data
☐ EDE file

Startup delay:

Here, you can set a start delay for BACnet failure detection.

When restarting the SYMPHOLIGHT Gateway BACnet, BACnet communication will only be switched on after this time has elapsed. This allows a remote station to recognize if the SYMPHOLIGHT Gateway BACnet has been restarted by the absence of BACnet requests. The value **0 s** sends a **BACnet restart notification** message as an unconfirmed COV notification to the registered recipient when restarting.

Password DCC/RD:

You can set a password to protect **DCC** (Device Communication Control) and **RD** (Reinitialize Device) BACnet services. Pay attention to capitalization (maximum of 50 characters).

Default priority:

Enter the preset priority here.

Disable default NC object:

Deactivate specification of a notification class object (NC) using the check box.

Datalinks:

You can set which BACnet data links are to be used via the **Data links** drop-down list.

The following are supported:

- BACnet IP (Ethernet)
- BACnet MS/TP (two-wire connection) via RS-485
- Simultaneous BACnet IP and BACnet MS/TP.

BACnet PTP:

By ticking this box, you can enable communication via the *point-to-point* BACnet half-router in addition to the BACnet data links. This is necessary for BACnet operation with a modem.

A) Gateway mode: Data links = BACnet IP

The following operating types are possible for BACnet IP connection: normally, BACnet BBMD (BACnet Broadcast Management Device) and BACnet Foreign Device. The BACnet BBMD and FD configuration is required for cross-IP-network operation. Ask the BACnet coordinator about the settings for your project.

a) IP mode = normal

Parameter	Value
Network number:	1
LAN name:	LAN1
UDP-Port:	47808
IP-Mode:	Normal

Network number:

Defines the network number of the BACnet network for the datalink (value = 1 to 65,534).



The network numbers of the configured datalinks must be unique.

LAN name :

Name of the data link interface

UDP port

Defines the UDP port of the BACnet / IP network as a decimal number. The default value is 47808 ("0xBAC0" – hexadecimal).

IP mode:

Defines the gateway's IP mode for this data link.

- **Normal:** Standard operating mode for a BACnet IP data link
- **BBMD:** Operating mode as "BACnet Broadcast Management Device".
- **Foreign Device:** Operating mode as "Foreign Device"

b) IP mode = BBMD

The gateway provides BBMD functionality for its own IP subnetwork and allows logins of external FD or BBMD devices.

Datalinks:

BACnet IP

BACnet PTP:

BACnet IP

Parameter	Value
Network number:	1
LAN name:	LAN1
UDP-Port:	47808
IP-Mode:	BBMD

BBMD

☐ Direct broadcasts to own ip network (one-hop)

Broadcast distribution table:

IP-Address	UDP-Port	Mask
------------	----------	------

Add

Save

Direct broadcasts to own IP network (one hop):

This option enables the use of “one hop” mode for BBMD. This mode is seldom used in networks and should only be set if the network planner explicitly plans for this.

Broadcast distribution table:

The table lists all BBMDs which are queried in a broadcast in addition to the devices in the particular network in order to reach the devices from other networks.

With **[Add]**, you can create a new list entry.

c) IP Mode = Foreign device

The gateway is set as a foreign device subscriber to the BACnet network.

Datalinks:

BACnet IP

BACnet PTP:

BACnet IP

Parameter	Value
Network number:	1
LAN name:	LAN1
UDP-Port:	47808
IP-Mode:	Foreign Device

Foreign Device

IP-Address BBMD-Server:

UDP-Port BBMD-Server:47808

Reregister interval:300 sec.

Save

IP address BBMD server:

The IP address of the BBMD which is to be used by the SYMPHOLIGHT Gateway BACnet for logging in as a foreign device.

UDP port BBMD server:

You can define the UDP port of the BBMD server as a decimal number (default value: 47808 dec. (0xBAC0 hex.)).

Re-register interval:

Time in seconds after which the gateway must newly register with the BBMD.



B) Gateway mode: Data links = BACnet MS/TP

BACnet MS/TP is the connection for BACnet devices via the RS-485 (two-wire) interface. The necessary settings can be made here. Ask the BACnet coordinator about the settings for your project.

Datalinks:

BACnet MS/TP

BACnet PTP:

☐

BACnet MS/TP

Parameter	Value
Network number:	2
MS/TP address:	0
Max. Master:	127
Max. info frames:	1
Serial interface:	COM1
Baudrate:	38400

Save

Network number:

Defines the network number of the BACnet network for the datalink. The value is between 1 and 65,534.

MS/TP address:

Defines the MS/TP MAC address.

Max. master:

Defines the highest MAC address for master nodes in the MS/TP subnetwork. The possible value range is between 0 and 127; the default value is 127. If this value is not writable via BACnet services, it must be 127.

Max. info frames:

Defines the maximum number of telegrams that a master node may send before the token has to be forwarded. The possible value range is between 1 and 127; the default value is 1. If this property is not writable via BACnet, this value must be 1.

Serial interface:

Defines the serial interface of the datalink.

Baud rate:

Speed of the MS/TP network suitable for the other MS/TP components in use. The value is stated in bit(s); possible values are: 9600, 19200, 38400, 57600, 76800 and 115200 baud. The default value is 76800 baud.

C) Gateway mode: BACnet PTP = activated

BACnet point-to-point is designed for communication via null-modem. The SYMPHOLIGHT Gateway BACnet is a half-router in BACnet PTP mode. Together with the dial-up part, it constitutes a BACnet router for a complete BACnet network. The BACnet networks must be configured correspondingly. The network number helps identify a BACnet network and must be unique within the entire BACnet network.

This mode is currently unavailable.

BACnet PTP: ☒

BACnet IP **BACnet PTP**

Parameter	Value
Connect timeout:	60 seconds
Idle timeout:	60 seconds
Automatic dialup:	- C=confirmed,U=unconfirmed
Incoming password:	somesecret1

External networks

Networknumber	Telephonnr. 1	Telephonnr. 2	Telephonnr. 3	Password	
5	10	11	12	somesecret	
6	11	12	13	somesecret	

Add

Save

Connect timeout:

Timeout for the establishment of a modem connection. If no connection is established within this time, it counts as a connection attempt. There is a maximum number of *APDU retries*.

IDLE timeout:

If no relevant data are transferred within this time during a connection, the connection is terminated.

Automatic dial-up:

Determines which BACnet services are the subject of a connection attempt. This is a list of “confirmed” and “unconfirmed” items with the BACnet enumeration of services.

- C2 – Confirmed Event Notification
- U3 – Unconfirmed Event Notification
- C15 – Confirmed Write Property (initiated by gateway)
- C16 – Confirmed Write Property Multiple (initiated by gateway)

Incoming password:

BACnet PTP password for dialing up the SYMPHOLIGHT Gateway BACnet.

External networks:

The networks that can be accessed externally via BACnet PTP are configured here. The network number indicates the accessible BACnet network. You can specify up to three telephone numbers under which the BACnet counterpart station can be reached. These are dialed consecutively by a modem as part of the **Connect timeout** phase. The password is used to log into the counterpart station.

6.4.3 BACnet | Device object

The BACnet device object in the SYMPHOLIGHT Gateway BACnet has a specific function that the other BACnet objects don't have. APDU parameters for BACnet transmission are set here. The device instance and device name can also be set. These properties are for BACnet device identification and must be unique within the entire BACnet network. For the exact settings, please ask the BACnet planner / coordinator.



The screenshot shows the SYMPHOLIGHT Gateway BACnet web interface. The top navigation bar includes the 'ercue' logo, tabs for 'General', 'System', 'BACnet', 'MQTT', and 'Help', and a user status 'User: admin' with flags for German and English. The left sidebar lists navigation options: Status, Settings, Device object (selected), Objects, Files, Persistent data, and EDE file. The main content area is titled '940 – BACnet device object' and features a 'Last Refresh' button and a 'REFRESH' button. Below this is a table with two columns: 'Property' and 'Value'.

Property	Value
Device instance:	2000
Device name:	SYMPHOLIGHT Gateway
Description:	SYMPHOLIGHT Gateway Client/Server
Location:	in the rack behind me
Vendor-Identifier:	
Vendor-Name:	
Model-Name:	
Firmware-Revision:	Revision 1.2
APDU Max-Length-Accepted:	1476 - IPEthernet
APDU Timeout:	3000 millise.
APDU Retries:	5
APDU Segmentation-Supported:	0 - Both
APDU Max-Segments-Accepted:	5
APDU Segment-Timeout:	2000 millise.

A 'Save' button is located at the bottom right of the table.

Device instance:

Defines the device instance number of the gateway, which has to be unique within the overall BACnet network. The value range of this property is between 0 and 4,194,302.

Device name:

Defines the SYMPHOLIGHT Gateway BACnet device name, which also must be unique.

Description:

Defines the BACnet description of the SYMPHOLIGHT Gateway BACnet. This is free descriptive text.

Location:

Defines the BACnet location of the SYMPHOLIGHT Gateway BACnet. This is free text for the installation location.

Vendor identifier:

Manufacturer ID for unique identification of the device manufacturer

Vendor name:

Manufacturer name as unique designation of the device manufacturer

Model name:

Model description of the SYMPHOLIGHT Gateway BACnet.

Firmware revision:

Firmware version of the SYMPHOLIGHT Gateway BACnet software

APDU max length accepted:

Maximum telegram size in bytes

The following values are possible: 50, 206, 480, 1024 and 1476 bytes.

APDU timeout:

This value in milliseconds defines the period of time after which a telegram that requires confirmation is deemed to have failed in the absence of confirmation. The default value is 3000 ms.

APDU retries:

This value defines how often a failed telegram is to be repeated (default = 5).

APDU segmentation supported:

Possible values: 0-both, 1-transmit, 2-receive, 3-no

APDU max segments accepted:

Defines how many segments are accepted as a maximum.

APDU segment timeout:

This value defines the period of time after which an acknowledgment-dependent, segmented telegram is deemed to have failed in the absence of segment confirmation (default = 2,000 ms).

6.4.4 BACnet | Objects

The BACnet object configuration is displayed here. Data points can be filtered according to object type using the upper panel of buttons. The available BACnet objects are listed below.

The object name and description can be edited directly in the input fields in the object list.



The **[Edit]** button opens a dialogue with the object-specific properties of the data points.

You can edit the properties here (see example below).

General
System
BACnet
MQTT
Help

User: admin

BACnet

940 – BACnet objects

Last Refresh:

C refresh



- ☐ Status
- ☐ Settings
- ☐ Device object
- ☒ Objects
- ☐ Files
- ☐ Persistent data
- ☐ EDE file

<input checked="" type="radio"/> All	<input type="radio"/> Analog-Input	<input type="radio"/> Analog-Output	<input type="radio"/> Analog-Value	<input type="radio"/> Binary-Input
<input type="radio"/> Binary-Output	<input type="radio"/> Binary-Value	<input type="radio"/> Multistate-Input	<input type="radio"/> Multistate-Output	<input type="radio"/> Multistate-Value
<input type="radio"/> Trendlog	<input type="radio"/> Schedule	<input type="radio"/> Notification-Class	<input type="radio"/> Eventlog	<input type="radio"/> Event-Enrollment
<input type="radio"/> File	<input type="radio"/> Group	<input type="radio"/> Loopt	<input type="radio"/> Global-Group	<input type="radio"/> LifeSafety-Point
<input type="radio"/> LifeSafety-Zone	<input type="radio"/> Accumulator	<input type="radio"/> Pulse-Converter	<input type="radio"/> Trendlog-Multiple	<input type="radio"/> Load-Control
<input type="radio"/> Structured-View	<input type="radio"/> Access-Door	<input type="radio"/> Timer	<input type="radio"/> Access-Point	<input type="radio"/> Access-Zone
<input type="radio"/> Credential-Data-Input	<input type="radio"/> Bitstring-Value	<input type="radio"/> Characterstring-Value	<input type="radio"/> Date-Pattern-Value	<input type="radio"/> Date-Value
			<input type="radio"/> Date-Time-Pattern-Value	<input type="radio"/> Date-Time-Value
				<input type="radio"/> Integer-Value
<input type="radio"/> Large-Analog-Value	<input type="radio"/> Octetstring-Value	<input type="radio"/> Positive-Integer-Value	<input type="radio"/> Time-Pattern-Value	<input type="radio"/> Timeee-Value
			<input type="radio"/> Notification-Forwarder	<input type="radio"/> Alert-Enrollment
				<input type="radio"/> Channel
<input type="radio"/> Lighting-Output	<input type="radio"/> Binary-Lighting-Output	<input type="radio"/> Network-Port	<input type="radio"/> Elevator-Group	<input type="radio"/> Escalator
		<input type="radio"/> Lift	<input type="radio"/> Staging	<input type="radio"/> Audit-Log
<input type="radio"/> Audit-Reporter				

Object-Id	Object-Name	Description		Trend
AI-1100	DALI LightSensorLV	DALI LightSensorLV		
BI-1110	DALI PresencelsPresent	DALI PresencelsPresent		
NC-1	NOTIF-1	Default notification class object		

Dialogue example of BACnet binary value object

The dialogue for editing a BACnet binary value object is shown as a representative dialogue here:

Property	Value
Object-Identifier:	BV-100
Object-Name:	9999_Lifecheck
Description:	Bhf Lifecheck UGW
Inactive-Text:	inactive
Active-Text:	inactive
Change-Of-State-Counter:	<input checked="" type="checkbox"/>
Elapsed-Active-Timer:	<input checked="" type="checkbox"/>
	<input checked="" type="checkbox"/> Intrinsic Reporting
Time-Delay:	0 
Notification-Class:	2000 NC 1 
Alarm-Value:	<input type="radio"/> Inactive <input checked="" type="radio"/> Active
Event-Enable	Event-Message-Texts-Config
Offnormal:	<input checked="" type="checkbox"/> <input type="text"/>
Fault:	<input type="checkbox"/> <input type="text"/>
Normal:	<input checked="" type="checkbox"/> <input type="text"/>
Notify-Type:	<input type="radio"/> Alarm <input checked="" type="radio"/> Event

The status texts for the values **0** and **1** can be edited in the **Inactive text** and **Active text** input fields. For this object type, BACnet allows a **Change-of-State-Counter** to be activated. The object is automatically extended to all object properties necessary for this purpose. This also applies for the **Elapsed-Active-Timer** (operating seconds counter). BACnet alarming is activated for this object with **Intrinsic Reporting**. The **Time Delay** property determines the report delay in seconds. All further information can be taken from the BACnet standard.



Using the **[Trend]** button, you can create a new Trendlog object with this object as the input reference in another dialogue.


Property	Value
Object-Identifier:	TR-1001
Object-Name:	DALIPresencelsPresent-TR
Description:	DALIPresencelsPresent-TR
Log_Device_Object_Property:	((BI,1110),85) DALIPresencelsPresent
Logging-Type:	Polling ▾
Log-Interval:	360000 ▾ (1/100) seconds
Buffer-Size:	1000 ▾
Start-Time:	((?,?,?),?,?,?)
Stop-Time:	((?,?,?),?,?,?)
Enable:	<input checked="" type="checkbox"/>
Stop-When-Full:	<input type="checkbox"/>
Align-Intervals:	<input checked="" type="checkbox"/>
Interval-Offset:	0 ▾ seconds
	<input type="checkbox"/> Intrinsic Reporting
Notification-Class:	NOTIF-1 ▾
Notification-Threshold:	100 ▾
Event-Enable	Event-Message-Texts-Config
Offnormal:	<input checked="" type="checkbox"/>
Fault:	<input checked="" type="checkbox"/>
Normal:	<input checked="" type="checkbox"/>
Notify-Type:	<input checked="" type="radio"/> Alarm <input type="radio"/> Event

6.4.5 BACnet | Files

The entire BACnet configuration is saved in three files:

bac1.cfg (driver); ***bac1.txt*** (data points); ***dispatch.txt*** (global dispatch file)

These files can be transferred between the computer and the SYMPHOLIGHT Gateway BACnet (download / upload) on this page. The [Edit](#) buttons open text windows in which you can edit the relevant files directly. No further file transfers are required for this.



e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway


General

System

BACnet

MQTT

Help

User: admin 

BACnet

Status

Settings

Device object

Objects

☒ Files

Persistent data

EDE file

940 – BACnet configuration files

Last Refresh:

REFRESH

Configuration	File	Gateway → PC	PC → Gateway	Edit
Driver:	/ugw/config/bac1.cfg	<div>Start Download</div>	<div>Start Upload</div>	<div></div>
Datapoints:	/ugw/config/bac1.txt	<div>Start Download</div>	<div>Start Upload</div>	<div></div>
Global dispatch:	/ugw/config/dispatch.txt	<div>Start Download</div>	<div>Start Upload</div>	<div></div>


The 'Edit' dialog box displays the following configuration file content:

```
# UGW-WEB - setup
# file: /ugw/config/bac1.cfg
# changed:
#
# BACnet driver configuration file
#
# Key                                Type                                Default                                Description
#-----
# DeviceID                          Integer [0..4194302]/'passiv'      4194302                                Instance num
# DeviceName                         String [max. 200]                  DEVICE-XXXXXX                          Object name
# DeviceDescription                  String [max. 200]                  ""                                       Description
```

Rows with a hash # at the beginning are comments. Rows without # at the beginning are activated settings.

Confirm changes with **[Save]**. Then close the information dialogue and carry out a simple restart of the communication software.

6.4.6 BACnet | Persistent data



 
General

System

BACnet

MQTT

Help

User: admin 

BACnet

○ Status

○ Settings

○ Device object

○ Objects

○ Files

☒ Persistent data

○ EDE file

940 – BACnet Persistent data

✖ Delete all persistent data

➡ Copy all persistent data to configuration

Object	BACnet value	Configured value


Last Refresh:

REFRESH


6.4.7 BACnet | EDE file

The BACnet objects and functions configured in the gateway can be shared with other partner companies in projects in the form of a specified CSV file (EDE file, Engineering Data Exchange).

To generate the EDE file automatically on this configuration page and then download it from the SYMPHOLIGHT Gateway BACnet to your computer, click **[Start]**.



 General
System
BACnet
MQTT
Help

User: admin
 

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

BACnet

- ☐ Status
- ☐ Settings
- ☐ Device object
- ☐ Objects
- ☐ Files
- ☐ Persistent data
- ☒ EDE file


940 – BACnet EDE file

The configured BACnet objects and functions of the gateway can be exchanged with partner companies by a special Excel table file.

This EDE file (EDE = Engineering Data Exchange) will be generated automatically.

Press here Start to start generating and download the compressed archive file to your PC.

Last Refresh:




6.5 MQTT menu

MQTT is a lightweight publish/subscribe messaging protocol for the Internet of Things (IoT) that is ideal for connecting remote devices with a small code footprint and minimal network bandwidth.

6.5.1 MQTT | Status

This page displays the current statuses of all MQTT data points. These data points can be used for data point mapping. The [\[Info\]](#) button loads details on the data points. If necessary, you can change MQTT values using the [\[Edit\]](#) button.



General



System

BACnet

MQTT

Help

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

User: admin  

MQTT

1630 - MQTT Status

Last Refresh:

⏮

⏪

Page size: 50

 

 
 
 

⏩

⏭

Update interval:

...

 seconds

Address	Name	Timestamp	Flags	Type	Value	
_error	Driver error		C.....V	I32	0	
_status	Driver state		C.....V	I32	4	
failure	Failure MQTT		C.....V	I32	1	
subscribe 1stfloor/presencesensor/ispresent	DALIPresenceIsPresent	---	STR		 
subscribe DALILightSensorLV	DALILightSensorLV	---	DBL	0.000000	

6.5.2 MQTT | Settings

You can make general settings for the MQTT driver and for the MQTT data links on this configuration page. Confirm changes with [Save]. Then close the information dialogue and carry out a simple restart of the communication software.

General
System
BACnet
MQTT
Help

User: admin

MQTT

- Status
- Settings
- Files

1630 – MQTT driver settings

Last Refresh:

User settings

Host	192.168.123.100
Port	1883
Client-ID	Session1
User	admin
Password
Default QoS	0
Default retain flag	Off
Clean session flag	Off
Keep alive	60 s
Payload	Value '23.4'
Encryption	TLSv1.2

Last will

Last will flag	Off
----------------	-----

Internal settings

Timeout	10000 ms
Timer	500 ms
Datapoint timer mode	Seconds
Max pending messages	100
System pre topic	\$SYS

Payloads

Placeholder begin	<
Placeholder end	>
Placeholder value	\$
Placeholder escape	\
Placeholder unknown value	null
Placeholder time format	%FT%T%z
Time stamp in milliseconds	Off
Add payload format	Choose File No file chosen

Save

6.5.3 MQTT | Files

The entire MQTT configuration is saved in three files:

mqtt1.cfg (driver); **mqtt1.txt** (data points); **dispatch.txt** (global dispatch file)

These files can be transferred between the computer and the SYMPHOLIGHT Gateway BACnet (download / upload) on this page. The Edit buttons open text windows in which you can edit the relevant files directly. No further file transfers are required for this.

General
System
BACnet
MQTT
Help

User: admin


MQTT

- Status
- Settings
- Files

1630 – MQTT configuration files

Last Refresh:

Configuration	File	Gateway → PC	PC → Gateway	Edit
Driver:	/ugw/config/mqtt1.cfg	Start Download	Start Upload	
Datapoints:	/ugw/config/mqtt1.txt	Start Download	Start Upload	
Global dispatch:	/ugw/config/dispatch.txt	Start Download	Start Upload	

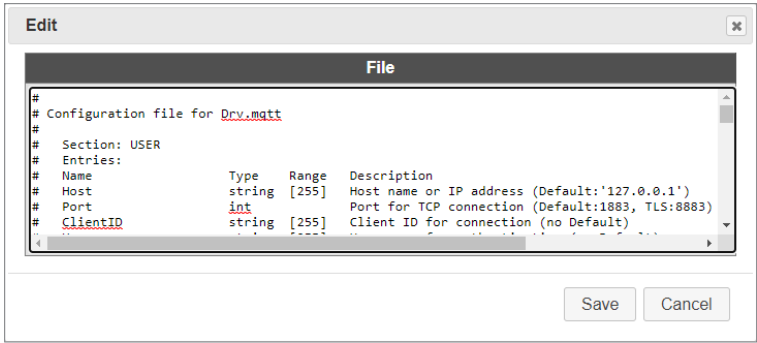

Rows with a hash # at the beginning are comments. Rows without # at the beginning are activated settings.


Confirm changes with [Save]. Then close the information dialogue and carry out a simple restart of the communication software.

6.6 Help menu

Contact information for the manufacturer and other system data are displayed in the Help menu.

6.6.1 Help | Info about

This page contains information about the manufacturer of the SYMPHOLIGHT Gateway BACnet.

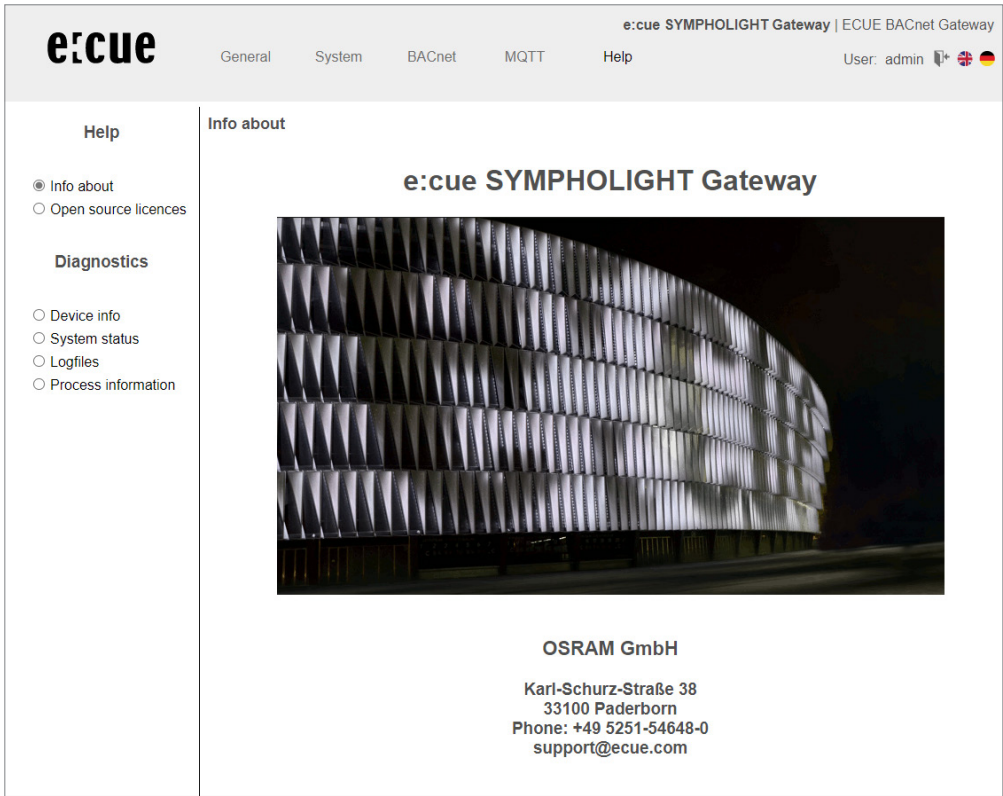

6.6.2 Help | Open source licenses

e!cue

GeneralSystemBACnetMQTTHelp

User: admin

Help

- Info about
- Open source licences**

Diagnostics

- Device info
- System status
- Logfiles
- Process information


Open source licenses

Open Source License Information

Start Download

6.6.3 Help | Device info

This page displays general information about the SYMPHOLIGHT Gateway BACnet.



General




System

BACnet

MQTT

Help

User: admin

Help

Info about

Open source licences

Diagnostics

Device info


System status

Logfiles

Process information

Device info

Last Refresh:



Parameter	Value
Type:	
GW-Version:	UGW-2372-Osram-alphaKP-StrMapping
OS-Version:	UGW-1998-gatewaykopplung-zu-baer-emt
Build-Info:	./build -t micro -o 116e1da7 -g 3e9d4a5d -i ugw
Datapoints:	2 / 100
Licensed drivers:	3
System start:	
Free system memory:	17 / 26 MByte
Last update:	OK

Type:

Manufacturer's internal hardware designation.

GW version:

Manufacturer's internal protocol ID.

OS version:

SYMPHOLIGHT Gateway BACnet software version.

Build info:

Information about the software build.

Data points:

Number of data points used / Number of licensed data points.

License drivers:

Information about the number of licensed bus protocol drivers.

System start:

Displays the last time the SYMPHOLIGHT Gateway BACnet was started.

Free system memory:

Size of used RAM and total RAM in MB


Too little free space can lead to operational problems.



Last update:

Validity of the last firmware update

6.6.4 Help | System status

  This page displays a detailed system map of the gateway. This also includes the driver status, data points and data point maps.



e!cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway
 User: admin  

General
System
BACnet
MQTT
Help

Help

- ☐ Info about
- ☐ Open source licences

Diagnostics

- ☐ Device info
- ☒ System status
- ☐ Logfiles
- ☐ Process information

System status

Last Refresh: Refresh

```

Name: Dpmngr
Version: UGW-2372-Osram-alphaKP-StrMapping
Compiled: 
Created: 

-----


Dispatching of datapoints:   licensed:100   defined:2   active:2
license type: X-Series
-----

Driver list:

driver route 1 system
name: System
state: ONLINE sync: NO
dpfile: </ugw/config/system1.txt>
cfgfile: </ugw/config/system1.cfg>
cmd: </ugw/bin/Drv.system -u -a $ADR>
pid: c297
requests pending: 0         max: 50
to send:
waiting:
          
```

6.6.5 Help | Log files (System)

You can activate / deactivate a more detailed version of the log records for each communication driver using the buttons **[ON]** and **[OFF]**. Log records provide information on how the program is running and any communication problems. The previous (historical) log outputs can be displayed by clicking **[Display Record]**. Clicking **[Start For 60 Sec.]** provides the current log outputs for 60 seconds after pressing the button. This process can be ended by pressing **[Stop]** at any time.



General


System

BACnet

MQTT

Help

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

User: admin


Help

Info about

Open source licences

Diagnostics

Device info

System status

Logfiles

Process information

Logfiles

Last Refresh:

REFRESH

Routing	Type	Name	Status	Verbose	
940	bac	BACnet	Online	ON	OFF
1630	mqtt	MQTT	Online	ON	OFF

Show history log

Start for 60 sec.

Stop

6.6.6 Help | Process information (System)

The statuses of all operating system processes are provided here. The **Mem** (memory usage) and **CPU** (processor utilization) columns provide important information on the status of a process.

e:cue SYMPHOLIGHT Gateway | ECUE BACnet Gateway

General System BACnet MQTT Help User: admin

Help

- ☐ Info about
- ☐ Open source licences

Diagnostics

- ☐ Device info
- ☐ System status
- ☐ Logfiles
- ☒ Process information

Process information Last Refresh: [Refresh]

```
top - 14:10:06 up 26 min, 0 users, load average: 1.66, 1.54, 1.30
Tasks: 61 total, 1 running, 60 sleeping, 0 stopped, 0 zombie
%Cpu(s): 0.0 us, 28.0 sy, 12.0 ni, 60.0 id, 0.0 wa, 0.0 hi, 0.0 si, 0.0 st
MiB Mem : 26.7 total, 2.2 free, 8.0 used, 16.5 buff/cache
MiB Swap: 0.0 total, 0.0 free, 0.0 used, 15.4 avail Mem
```

PID	USER	PR	NI	VIRT	RES	SHR	S	%CPU	%MEM	TIME+	COMMAND
400	nobody	30	10	1740	1004	812	R	19.0	3.7	0:00.13	top
2	root	20	0	0	0	0	S	0.0	0.0	0:00.01	kthreadd
1	root	20	0	816	588	552	S	0.0	2.2	0:00.02	init
4	root	0	-20	0	0	0	I	0.0	0.0	0:00.00	kworker/0+
3	root	20	0	0	0	0	I	0.0	0.0	0:00.00	kworker/0+
7	root	0	-20	0	0	0	I	0.0	0.0	0:00.00	mm_percpu+
8	root	20	0	0	0	0	S	0.0	0.0	0:00.04	ksoftirqd+
9	root	-2	0	0	0	0	S	0.0	0.0	0:02.51	ktimersoft+
6	root	20	0	0	0	0	S	0.0	0.0	0:00.00	kswork
11	root	-2	0	0	0	0	I	0.0	0.0	0:00.00	rcu_sched
12	root	-2	0	0	0	0	S	0.0	0.0	0:00.00	rcub/0
13	root	-2	0	0	0	0	S	0.0	0.0	0:00.00	rcuc/0
14	root	20	0	0	0	0	S	0.0	0.0	0:00.00	kswork
15	root	rt	0	0	0	0	S	0.0	0.0	0:00.00	nosixcmt+

7 Dismounting



Before dismounting, appropriate measures must be taken to protect the respective components against damage caused by electrostatic discharge (ESD protection).

Disconnect all attached cables. Dismount the e:cue SYMPHOLIGHT Gateway BACnet from the rail by pulling down the handle of the DIN rail bracket at the back and unhitching the SYMPHOLIGHT Gateway BACnet. The dismounting is completed.

8 Certifications



9 FAQs

You want to access the gateway, but do not know the IP address

Solution 1:

If the computer is set as the DHCP client, address issuance occurs automatically (APIPA) if the DHCP server is not present. The computer therefore automatically receives an IP address from the range in which the gateway works with its (default) IP address, 192.168.123.1. This default address can be activated until the next restart by pressing the **[Reset]** button (between 5 and 10 seconds).

Solution 2: (computer skills and an installed BACnet protocol required)

When BACnet is installed on the gateway (see sticker on the casing of the device), it can be combined with the Wireshark program (freeware, available at: <http://www.wireshark.org>) to sniff the network traffic and read out based on the reports. Start by selecting the Wireshark program and then choose Capture Options. Check the settings in the next window and press **[Start]**. The Capture window will appear. Set the filter to bacnet. Then start the gateway and wait for the output shown in the figure.

The IP is shown under:

Source:	192.168.123.1 (in this example)
Network protocol:	BACnet
Info:	I-Am-Router-To-Network

RS-485 connection problems

For RS485 connections, do not connect the GND, especially between switching cabinets with different GND potentials, if possible.

RS-485 A B wires reversed

With swapped A and B data lines, connection does not take place. The yellow LED then lights up constantly.

10 Dimensions

All dimensions in mm

